


Creative Woodworking N.W., Inc.

1036 S.E. Taylor * Portland, Oregon 97214
Phone:(503) 230-9265 * Fax:(503) 232-9082
www.Creativewoodworkingnw.com

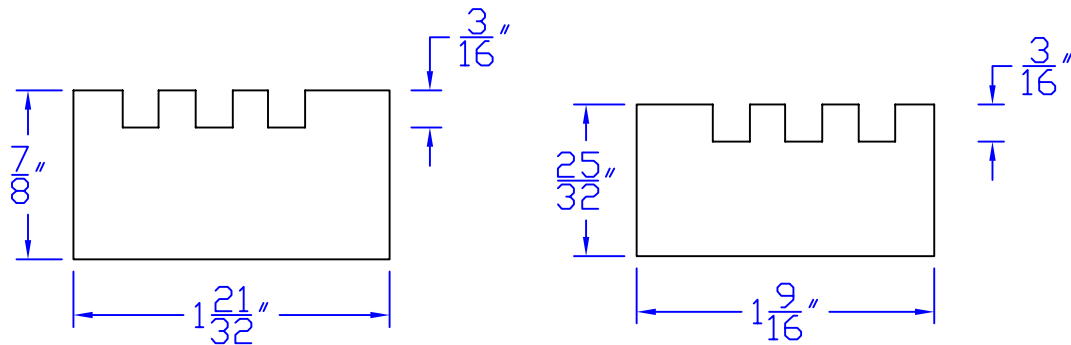

BEFORE SANDING - AFTER SANDING

TEDG009

$\frac{7}{8}" \times 1\frac{21}{32}"$